

Instructions to Clean the Guards and Blade

1. Ensure that the fan is switched off from the power source before removing the guard.
2. Remove the guards and the blade. Be careful to not drop the blade.
3. Use a soft cloth with mild soap to clean off any dust or stains.
4. Wipe with a dry cloth.
5. Never use polish or corrosive liquids as this will damage the paint, metal or plastic.
6. Put the blade back and lock the guard securely before use.
7. Reconnect the power cord.

Safety Instructions

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Improper installation may result in the risk of fire, electric shock or injury to persons.
5. Do not place the fan in or near an open window, rain and other weather elements may cause an electrical hazard.
6. Do not immerse or expose the Motor Housing, Power Cord and Plug in water or other liquids.
7. The fan should be placed on a flat and stable surface to avoid overturning when in operation.
8. Never insert fingers or any object through the guards.
9. Do not attempt to open any part of the motor housing as a risk of electrical shock may exist.

Warranty

Solent offers a 3 year warranty from the date of purchase.

The Warranty Becomes Void When:

1. Damage is caused to the product due to improper operation or voltage fluctuations.
2. Incorrect assembly and installation.
3. If the labels have been removed from the product.
4. Attempt to repair, adjust or modify any electrical or mechanical functions on this unit.

Return of Product

If you need to exchange or replace the unit, return it in its original packaging with all supporting documentation.



t +27 (0) 31 563 4600

f +27 (0) 31 563 4654

info@solent.co.za

www.solent.co.za

Pedestal Fan




400mm Energy Saving Fan


Dear Valued Customer, thank you for choosing a Solent fan. To ensure you make the most of your purchase, we kindly request that you take a moment to review this instruction sheet.

Exploded View


1. Name Plate
2. Front Guard
3. Blade Locking Nut
4. Blade
5. Rear Locking Nut
6. Rear Guard
7. Motor Shaft
8. Motor Housing
9. Control Panel
10. Upper Pole
11. Thumb Screws
12. Lower Pole
13. Base
14. Base Screw

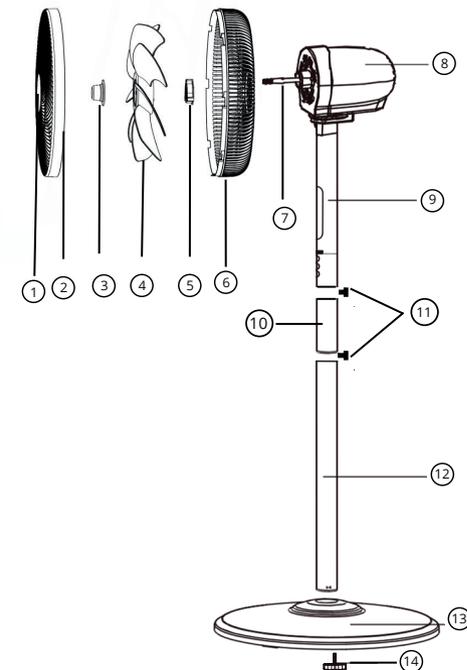

Installation Instruction

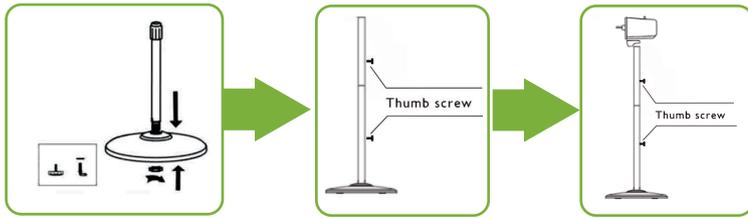

1. Insert the Lower Pole into the base and fasten the Base Screw.
2. Loosen the Thumb Screws on the Lower Pole and insert the Upper Pole into it.
3. Put the Motor Housing into the Upper Pole and fasten the Thumb Screw on the back.

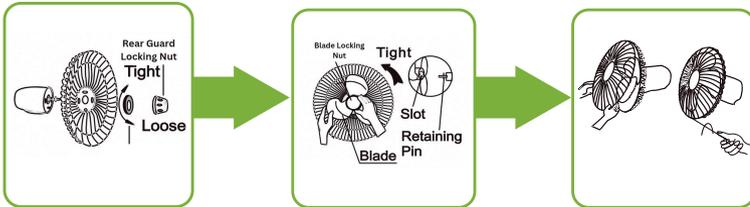

4. Remove Rear Guard Locking Nut from the front of the motor.
5. Fix the Rear Guard onto the motor and tighten the Blade Locking Nut.
6. Insert the blade into the Motor Shaft. Make sure the stopper pin is fitted into the groove of the blade. Turn the Blade Locking Nut counter clockwise to tighten the blade.
7. Fix the Front Guard to the Rear Guard by using a screwdriver to tighten the locking screw.



8. Adjust the fan elevation angle for best air direction by pushing the elevation tilt handle back or forth
9. Neatly run the power cord to the power source/socket outlet. Ensure that the voltage used is **220 volts 50 Hz**.

Control Panel/Remote Control Functions

Power On/Off:

1. Press this button to switch the fan ON, it will start at low speed.
2. Press this button again to switch the fan OFF.

Speed:

1. After the fan has started operating, press this button to select the desired fan speed.
2. The sequence is 1 to 9 when the key is touched repeatedly.

Mode Key:

Press this key to select the mode. The sequences are normal, natural and sleep when the key is pressed continuously.

- **Normal Mode** - The fan blows continuously from 1 to 9 depending on the power speed that was set.
- **Natural Mode** - The fan speed imitates that of a nature breeze.
- **Sleep Mode** - The fan speed fluctuates high and low, combining with natural mode.

OSC Key

Press this key to control the fan oscillation.


Timer Key

Slide the key from left to right to set the timer of your choice between 0 to 9 hours.

Energy Efficiency - Power Consumption per Speed Setting

These fans are extremely energy efficient, consuming a minimum of 4 watts and a maximum of 75 watts, depending on the speed setting between 1 & 9.

Fan Control Panel

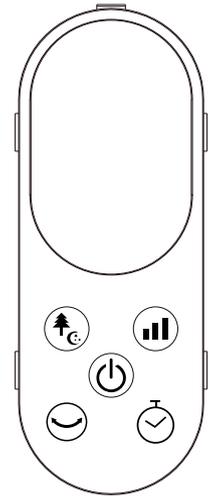

Remote Control

